


Toro44 600mm & 1200mm – Sensor On/Off

Montering


Armaturen monteras med hjälp utav installationsskruvhål (Nyckelhål) som har olika c/c mått beroende på armaturens storlek (Se nedan).

- Modell: L600 = skruv c/c 510mm
- Modell: L600 = skruv c/c 70mm (takdosa)
- Modell: L1200 = skruv c/c 950mm

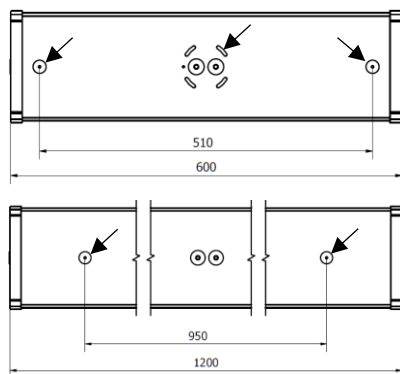

Kabelanslutning

Centrumhål på baksidan 2st. Ingång i gaveln 1st på varje sida.

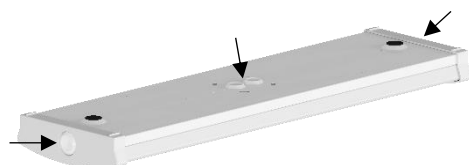

Kupa

Microprismatisk kupa som sitter på plats med hjälp av en fjäder i vardera gavel.

Dra kupan åt sidan, där känner du fjädringen. sedan upp eller ner. (se bild)




Installation

Inkommande el kopplas in i snabbkopplingsplint (upp till 2.5mm²).

L600: 3-pol plint sitter i mitten av armaturen. Vidarekopplingsbar.

L1200: 1st 5-pol plint i varje ända, 1st 5-pol plint i mitten.

Samtliga plintar är ihopkopplade.

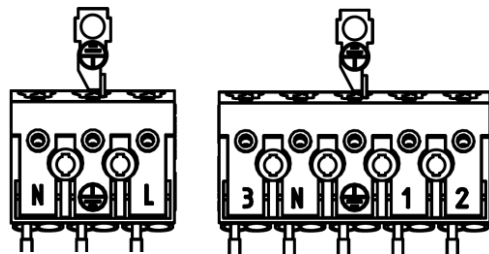


										Avsäkring	
Enr	Modell	Effekt (w)	Ljusflöde (lm)	Lm/Watt	Färgtemp (k)	Färg	Mått (mm)	B16	C16		
6522	72 210 21	Std	15w (9-17)*	2129 (1451-2468)*	147	3000k	Vit	600/170/50	50	85	
6522-4	72 210 57	Std	15w (9-17)*	2257 (1538-2616)*	156	4000k	Vit	600/170/50	50	85	
6532	72 210 25	Std	28w (24-38)*	4180 (3505-5454)*	147	3000k	Vit	1200/170/50	50	85	
6532-4	72 210 61	Std	28w (24-38)*	4431 (3715-5781)*	156	4000k	Vit	1200/170/50	50	85	
9109	79 062 55	Reservkupa	-	-	-	-	600	-	-	-	
9110	79 062 56	Reservkupa	-	-	-	-	1200	-	-	-	
9111	79 062 57	Diffusorfilm	-	-	-	-	600	-	-	-	
9112	79 062 58	Diffusorfilm	-	-	-	-	1200	-	-	-	

* se separat monteringsanvisning

Toro44 600mm & 1200mm – Sensor On/Off

Reparation

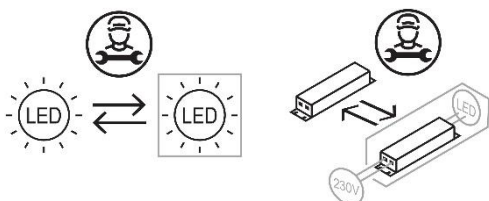

Byte av ljuskälla och drivdon skall endast utföras av kvalificerade personer!

Effektlägen

Inst. DIP		Toro44 L:600				
		Lumen				
1	2		Watt	3k	4k	
-	-	200mA	9	1451	1538	
-	ON	250mA	12	1790	1898	
ON	-	300mA	15	2129	2257	
ON	ON	350mA	17	2468	2616	


Inst. DIP		Toro44 L:1200				
		Lumen				
1	2		Watt	3k	4k	
-	-	500mA	24	3505	3715	
-	ON	600mA	28	4180	4431	
ON	-	700mA	33	4817	5106	
ON	ON	800mA	38	5454	5781	

Sensorinställning / Räckvidd

ON
↑



Räckvidd sensor					Tid					Skymningsrelä				
	1	2	3			4	5	6			7	8	9	
I	ON	ON	ON	100%	I	ON	ON	ON	5s	I	ON	ON	ON	2 lux
II		ON	ON	75%	II		ON	ON	30s	II	ON	ON		10 lux
III	ON		ON	50%	III	ON		ON	90s	III		ON		25 lux
IV			ON	25%	IV		ON	ON	3min	IV	ON			50 lux
V				10%	V	ON	ON		20min	V				Disable
					VI				30min					

Ceiling mounted height: 3m
Sensitivity: 100%/75%/50%/25%/10%

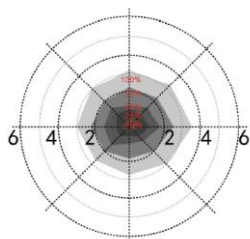


Normal moving (Speed:1m/s)

Ceiling mounted height: 6m(*)
Sensitivity:100%/75%/50%

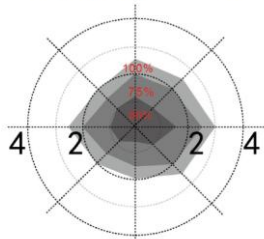


Normal moving (Speed:1m/s)

Wall mounted height: 2m
Sensitivity: 100%/75%/50%/25%/10%

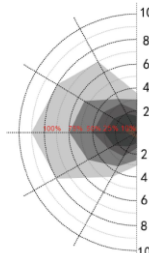

Normal moving (Speed: 1m/s)

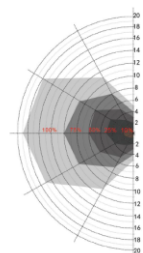

Slow moving (Speed 0.3m/s)